

Seat Heater Operation Instructions

The driver and passenger front seats in this vehicle are equipped with Accessory Seat Heaters. Locate the switch below for each seat. They will be mounted on the center console between the two seats. The switch has three positions. The center position is "OFF" and the LED will not be lit.

"HIGH"

Switch shown is on the "High" setting. The LED will light RED in this position. Heat will be noticeable within three minutes. This time can vary according to the seat covering material, temperature and the type or amount of clothing worn by the user.



"LOW"

Switch shown is on the "Low" setting. The LED will light GREEN in this position. Switch to this setting once a desirable seat temperature has been reached.



Safety Precautions:

- * Do not place any heavy, sharp or pointed objects on the seats.
- * Any fluid spilled on the seats may destroy the seat heater and may cause damage to the vehicle.
- * Never operate the seat heater while the seats are wet or soaked with fluid.
- * Do not keep insulating material (sheets, covers, coats, etc.) on the seats while the seat heater is running.
- * To protect damage and discharge of the battery, avoid seat heater operation for extended periods of time without running the engine.
- * Individuals who are extra sensitive to heat should only operate the seat heater in the "LOW" position.

Seat Heater Operation Instructions

The driver and passenger front seats in this vehicle are equipped with Accessory Seat Heaters. Locate the switch below for each seat. They will be mounted on the center console between the two seats. The switch has three positions. The center position is "OFF" and the LED will not be lit.

"HIGH"

Switch shown is on the "High" setting. The LED will light RED in this position. Heat will be noticeable within three minutes. This time can vary according to the seat covering material, temperature and the type or amount of clothing worn by the user.



"LOW"

Switch shown is on the "Low" setting. The LED will light GREEN in this position. Switch to this setting once a desirable seat temperature has been reached.



Safety Precautions:

- * Do not place any heavy, sharp or pointed objects on the seats.
- * Any fluid spilled on the seats may destroy the seat heater and may cause damage to the vehicle.
- * Never operate the seat heater while the seats are wet or soaked with fluid.
- * Do not keep insulating material (sheets, covers, coats, etc.) on the seats while the seat heater is running.
- * To protect damage and discharge of the battery, avoid seat heater operation for extended periods of time without running the engine.
- * Individuals who are extra sensitive to heat should only operate the seat heater in the "LOW" position.