

250-4382 5-Wire Relay Wiring Diagram

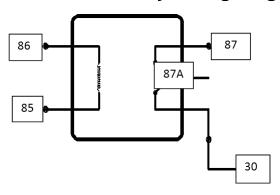

| Relay Terminal | Relay Wire Color | Function Description |
|----------------|------------------|------------------------------|
| 86 | Black | Chassis Ground |
| 85 | Orange | Brake (Cold Side) To Vehicle |
| 87 | Green | Not used |
| 87A | Violet | Brake to Cruise (Cold Side) |
| 30 | Blue | Chassis Ground |


Form #5260, Rev. A, 05-16-11

250-4382 5-Wire Relay Wiring Diagram

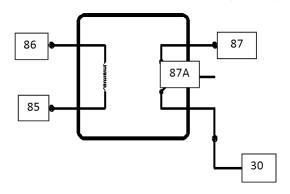

| Relay Terminal | Relay Wire Color | Function Description |
|----------------|------------------|------------------------------|
| 86 | Black | Chassis Ground |
| 85 | Orange | Brake (Cold Side) To Vehicle |
| 87 | Green | Not used |
| 87A | Violet | Brake to Cruise (Cold Side) |
| 30 | Blue | Chassis Ground |


250-4382 5-Wire Relay Wiring Diagram

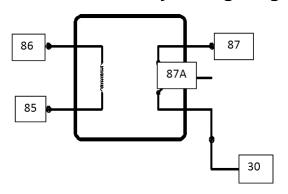

| Relay Terminal | Relay Wire Color | Function Description |
|----------------|------------------|------------------------------|
| 86 | Black | Chassis Ground |
| 85 | Orange | Brake (Cold Side) To Vehicle |
| 87 | Green | Not used |
| 87A | Violet | Brake to Cruise (Cold Side) |
| 30 | Blue | Chassis Ground |

Form #5260, Rev. A, 05-16-11

250-4382 5-Wire Relay Wiring Diagram

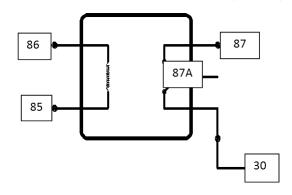

| Relay Terminal | Relay Wire Color | Function Description |
|----------------|------------------|------------------------------|
| 86 | Black | Chassis Ground |
| 85 | Orange | Brake (Cold Side) To Vehicle |
| 87 | Green | Not used |
| 87A | Violet | Brake to Cruise (Cold Side) |
| 30 | Blue | Chassis Ground |

Form #5260, Rev. A, 05-16-11