

#### **KIT CONTENTS**

ITEM	QTY	DESCRIPTION	
1	1	ELECTRONIC CONTROL MODULE (BTECM)	
2	1	BLUETOOTH SWITCH (BTSWITCH)	
3	1	VEHICLE INTERFACE HARNESS (BTHARNESS)	
		MUTE ADAPTOR BOX	
4	1	BLUETOOTH MICRO-PHONE	
5	1	HARDWARE KIT	

#### SERVICE PARTS

REFERENCE: WWW.ROSTRA.COM WHERE PARTS ARE NOT CLEARLY MARKED WITH PART NUMBER INFORMATION.

### **GENERAL APPLICABILITY**

REFERENCE APPLICATION GUIDE AT <u>WWW.ROSTRA.COM</u> TO FIND APPLICATION INFORMATION FOR SPECIFIC VEHICLES. INSTALLATION VIDEO FOOTAGE IS POSTED ON THE WEBSITE FOR VARIOUS VEHICLES. THE INDIVIDUAL INSTRUCTION MAY BE FOUND ON THE <u>WWW.ROSTRA.COM</u> WEBSITE FOR RADIO TEARDOWN OR YOU MAY FIND HELP ON <u>WWW.INSTALLER.COM</u>, CLICK ON DASH KIT TO VIEW INSTRUCTIONS. BEFORE DOING ANY IRREVERSIBLE INSTALLATION TO A VEHICLE, VALIDATE THE FUNCTION OF THE PRODUCT ON THE VEHICLE. ROSTRA PRECISION CONTROLS IS NOT BE RESPONSIBLE FOR DAMAGE INCURRED DUE TO VEHICLE VARIABILITY, SUCH AS MODEL YEAR CHANGEOVER AND RADIO TO RADIO MANUFACTURER INCON-SISTENCY. IT HAS BEEN NOTED DURING THE RELEASE OF THIS PROGRAM, THAT VEHICLE TO VEHICLE VARIATION OCCURS, I.E. FACEPLATES ON RADIOS MAY BE THE SAME BUT THE POWER/SPEAKER HARNESS-ES MAY DIFFER, CAUSING THE BLUETOOTH UNIT TO FAIL TO FUNCTION. INSTANCES HAVE BEEN FEW AND PRODUCT ACCEPTANCE HAS COME QUICKLY. ALWAYS VERIFY APPLICATION TO THE LATEST GUIDE FOUND ON THE WEBSITE.

## FORM #5254, REV. RTP, 08-24-10

# **Recommended Tools**

SAFETY TOOLS				
GLOVES				
SAFETY GLASSES				
INSTALLATION TOOLS				
PLIERS	Some switch installations			
Trim Tool	Dash trim removal			
SCREW DRIVERS	General dis- & reassembly			
Drill Bit or	19мм or 3/4"			
KNOCKOUT PUNCH	(FOR SWITCH)			
Socket &	NEGATIVE BATTERY TERMINAL,			
WRENCH SET	RADIO, GLOVE BOXETC.			

# SPECIAL NOTE: INSTALLATION SEQUENCES

After **Safety** mandated preparatory steps have been taken, the installation sequence is the suggested method for completing the accessory installation. In some instances the suggested sequence is written for one associate to install and in others the sequence is given as part of a team accessory installation. Unless otherwise stated in the document, the associates may perform the installation steps in any order to make the installation as efficient as possible while maintaining consistent quality.

# **RECOMMENDED SEQUENCE OF APPLICATION**

Step 1:	Verify Components	
Step 2:	Remove negative battery cable.	son the second s
Step 3:	CAREFULLY REMOVE TRIM PIECES TO GAIN ACCESS TO RADIO MOUNTING HARD-WARE.	₩¢
Step 4:	Remove connectors from rear of Radio and install Vehicle Interface Harness ( <b>BTHarness</b> ) to Radio and to speaker harness. Plug Interfaces into <b>BTECM. Plug</b> in <b>BTSwitch</b> and <b>microphone</b> .	5709
Step 5:	REATTACH BATTERY CABLE, TURN KEY TO ACCESSORY POSITION, VERIFY BLUE BACKLIGHT OF <b>BTSwitch</b> is lit. If not, see <b>Troubleshooting Guide</b> , <b>Problem 1.</b>	
Step 6:	PAIR PHONE TO RADIO, SEE <b>Owner'S MANUAL</b> (REQUIRES BLUETOOTH COM- PATIBLE PHONE FOR VALIDATION OF FUNCTION). MAKE TEST CALL TO VERIFY PROPER SPEAKER CONFIGURATION AND VOLUME. IF SYSTEM FUNCTIONS PROPER- LY, DISCONNECT BATTERY CABLE AND CONTINUE. TO ADJUST VOLUME USE EYEGLASSES SCREW DRIVER TO INCREASE OF DECREASE VOLUME WITH THE POTETIOMETR ON THE BACK OF THE <b>MUTE ADAPTOR BOX</b> . SEE FIGURE 1. IF SYSTEM DOES NOT FUNCTION PROPERLY, SEE <b>TROUBLESHOOTING GUIDE</b> .	
Step 7:	WHERE THE SWITCH IS VEHICLE SPECIFIC, MOUNT SWITCH IN VACANT/DESIR- ABLE KNOCKOUT KNOCKOUT FOUND ON THE DASH OR CENTER CONSOLE.DO NOT DRILL A HOLE OR CARRYOUT ANY IRREVERSIBLE INSTALLATION STEP UNTIL THE BLUETOOTH SYSTEM HAS BEEN TESTED. SELECT A LOCATION FOR THE THROUGH-HOLE SWITCH. USING A ¾" OR <b>19MM DRILL</b> , OPEN A HOLE TO MOUNT THE <b>BTSWITCH</b> . USE THE FOAM GASKET TO SECURE THE SWITCH AND COVER GAPS CREATED BY CONTOURED SURFACES.	

#### LEGEND

TOP



## **RECOMMENDED SEQUENCE OF APPLICATION (CONTINUED)**

Step 8:	INSTALL BLUETOOTH <b>MICROPHONE</b> ON FUNCTIONAL SURFACE, TYPICALLY IN THE INSTRUMENT CLUSTER PANEL OF THE VEHICLE, IN FRONT OF THE DRIVER. TAKE CARE NOT TO BLOCK VIEW OF INSTRUMENTS. USE ALCOHOL PAD TO THOROUGH- LY CLEAN INSTALLATION SITE.	Î
Step 9:	VERIFY ALL BLUETOOTH AND RADIO CONNECTIONS ARE FULLY INSTALLED. PROPERLY TIE-UP HARNESSES AND CABLES TO PREVENT DAMAGE USING SUP- PLIED CABLE TIES AND DOUBLE-SIDED STICKY FOAM. FAILURE TO PROPERLY SECURE HARNESSES AND COMPONENTS MAY CAUSE UNWANTED NOISE, DAMAGE AND PREMATURE FAILURE.	ſ
STEP 10:	Before reconnecting battery, where required, ensure proper ground and 12-volt accessory power of <b>BTHARNESS</b> are properly installed.	••• <b>•</b>
Step 11:	Retest System.	Î

### **TROUBLESHOOTING GUIDE**

3	TOP
	5

CAUTION: REMOVE NEGATIVE BATTERY CABLE PRIOR TO DISCONNECTING ANY ELECTRICAL CONNECTIONS. FAILURE TO DO SO, COULD RESULT IN DAMAGE TO THE **BTECM** OR VEHICLE RADIO.


# **PROBLEM 1 - BLUETOOTH KIT DOES NOT START UP:** (BLUE BACK LIGHT IN BLUE TOOTH SWITCH DOES NOT COME ON WHEN IGNITION SWITCH IS IN ACCESSORY OR START POSITION.)

- 1. VERIFY THAT ALL ELECTRICAL CONNECTIONS ARE SECURE, FULLY INSERT CONNECTORS INTO RADIO HARNESSES AND **BTECM**.
- 2. CHECK THAT THE BULLET CONNECTORS ON THE POWER WIRES ARE CONNECTED PROPERLY.
- 3. CHECK FOR A BLOWN FUSE ON THE **BTHARNESS.**
- 4. The car may require an alternate accessory source. If the blue wire of the BTHARNESS has an inline connector, disconnect the blue accessory wire from the BTHARNESS and manually connect the wire coming from the BTECM side to an accessory source found in the vehicle. Typically this can be found at the radio, but sometimes may require a source from a different location.
- **PROBLEM 2 BLUETOOTH KIT DOES NOT TURN OFF** WHEN THE KEY IS REMOVED FROM THE IGNITION SWITCH. (BLUE BACK LIGHT IN BLUE TOOTH SWITCH DOES NOT TURN OFF WHEN IGNITION SWITCH IS IN OFF POSITION.) PLEASE CHECK THE FOLLOWING:
  - 1. There should be no voltage on the blue wire when ignition key is off. **This will cause battery drain.** Reinstall source for ignition accessory power.

#### **PROBLEM 3 - NOT ALL SPEAKERS ARE MUTED.** CHECK THE FOLLOWING:

1. BE SURE CONNECTORS AT THE INTERFACE HARNESS AND CONTROL MODULE ARE CONNECTED PROPERLY AND FULLY INSERTED.

**OPERATOR INSTRUCTIONS:** REFER TO OWNER'S MANUAL FOR SYSTEM FUNCTION.

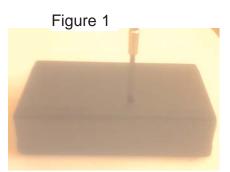

Volume adjustment example (See Step 6 above)

