
PART NUMBER: UNIVERSAL

GENERAL APPLICABILITY

UNIVERSAL

KIT CONTENTS

ITEM	QTY	DESCRIPTION			
1	2	LED DAYTIME RUNNING LIGHTS*			
2	1	CONTROL MODULE			
3	1	DRL EXTENSION HARNESS (SHORT)			
4	1	DRL EXTENSION HARNESS (LONG)			
5	1	Power Harness			
6	1	INDICATOR HARNESS			
7	1	FUSE HARNESS			

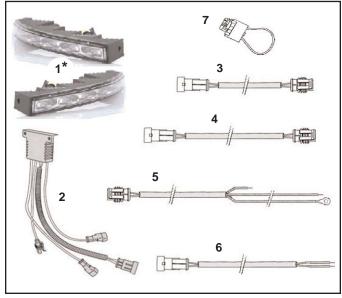

^{*} LIGHTS SHOWN FOR REFERENCE ONLY

Universal Hardware Kit Contents**

ITEM	QTY	DESCRIPTION		
1	12	WIRE ZIP TIES		
2	4	Bolts w/ Washers		
3	4	FOAM WASHERS		
4	8	Pan Head Screws		
5	8	Nuts		
6	3	ELECTRICAL CONNECTORS		
7	2	#10-32 Pan Head Screw		
8	2	#10-32 Nut w/Lockwasher		
9	1	VHB TAPE		
10	4	Brackets		

^{**} HARDWARE KIT (260-5000-UNI) SOLD SEPARATELY

RECOMMENDED TOOLS

PERSONAL & VEHICLE PROTECTION						
SAFETY GLASSES						
Masking Tape						
SPECIAL TOOLS						
VOLT-OHM METER						
RECOMMENDED INSTALLAT	TION TOOLS					
TRIM REMOVAL TOOL	PHILLIPS SCREWDRIVER					
TAPE MEASURE	10-MM WRENCH					
DRILL BITS	SOLDERING TOOL					
Wire Cutters	SHARP KNIFE					
SPECIAL CHEMICALS						

CONFLICTS

Note:			

LEGEND



STOP: DAMAGE TO VEHICLE MAY OCCUR. DO NOT PROCEED UNTIL PROCESS COMPLIANCE HAS BEEN MET.



 $\underline{\text{OPERATOR SAFETY:}} \text{ Use Caution to Avoid Risk of Injury.}$



CRITICAL PROCESS: PROCEED WITH CAUTION TO ENSURE A QUALITY INSTALLATION. THESE POINTS WILL BE AUDITED ON A COMPLETED VEHICLE INSTALLATION.



GENERAL PROCESS: THIS HIGHLIGHTS SPECIFIC PROCESSES TO ENSURE A QUALITY INSTALLATION. THESE POINTS WILL BE AUDITED DURING THE ACCESSORY INSTALLATION.



TOOLS & EQUIPMENT: THIS CALLS OUT THE SPECIFIC TOOLS AND EQUIPMENT REQUIRED FOR THE PROCESS.



REVISION MARK: THIS MARK HIGHLIGHTS A CHANGE IN INSTALLATION WITH RESPECT TO PREVIOUS ISSUE.


IMPORTANT

NOTE!

- Installation must be done in strict accordance with the installation instructions.
- DAYTIME RUNNING LIGHTS (DRLs) ARE DESIGNED TO TURN ON WITH IGNITION AND REMAIN ON UNTIL IGNITION IS TURNED OFF. DRLs ARE NOT A SUBSTITUTE FOR HEADLIGHTS AT DUSK/DAWN OR DURING DARKNESS.
- THE DRLs come programmed to be used as position lights (dimming the DRLs when the headlight switch is ON). To turn the Position Feature OFF, connect the DRLs as described in the instructions below, then:
 - TURN ACC/IGNITION ON.
 - QUICKLY TURN THE HEADLIGHT SWITCH ON AND OFF THREE TIMES AND THE FOURTH TIME LEAVE THEM ON.

 NOTE: THE DRLs will flash momentarily.
 - QUICKLY TURN THE HEADLIGHT SWITCH ON AND OFF TWO TIMES AND THE THIRD TIME LEAVE THEM ON. THIS WILL TURN THE POSITION LIGHT FEATURE OFF.
 - To turn the position light feature ON, repeat the steps above.
- PLEASE ENSURE ALL WIRING IS LAID SO THAT IT CANNOT BE PULLED OR ABRADED AND IS SECURELY FASTENED WITH WIRE TIES.

ATTENTION: FOGGING OF THE LENSES

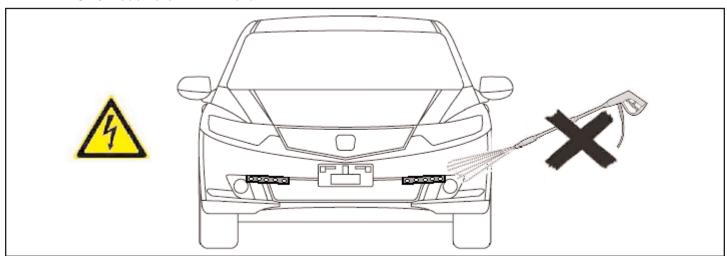

Modern headlamps are ventilated to avoid corrosion. This means that in certain conditions condensation collects inside of the lens. This should disappear shortly after the DRL is turned on.


FOGGING OF THE LENS IS NO REASON FOR COMPLAINT!

INSTALLATION

STEP 1: DRL Mounting Instructions

1. It is advisable to disconnect the negative battery cable for 3 minutes before beginning installation to avoid unintended air bag deployment.

Note: Record any anti-theft radio codes prior to disconnecting.

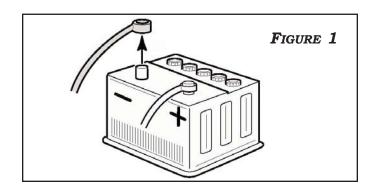

INSTALLATION

STEP 1: DRL MOUNTING INSTRUCTIONS (CONTINUED)

2. Make sure the installation position of the Rostra DRLs conforms to the diagrams in *Figures 2*, 3 & 4.

INSTALLATION REQUIREMENTS:

• Lights must be mounted no less than 250mm (10") and no more than 1067mm (42") above the ground (ECE R87 states no more than 1500mm (59") above ground). If DRLs are to be used as a position lights as well, lights must be mounted no less than 350mm (14") above the ground.


FIGURE 2


- The center line of the light must be parallel to the ground. **Figure 3**
- The reference axis of the light must be parallel to the longitudinal axis of the vehicle (i.e. the lens of the light should be vertical to the ground and perpendicular to the direction of travel). Figure 4
- \bullet Light must be visible from 20° inboard and outboard, as well as from 10° above and below the horizontal axis.
- Two Lights are required for motor vehicles.
- Lights to be mounted within 400mm (16") of the widest point of the vehicle and no closer than 600mm (24") together.
- IF THE DRLs are located within 100mm (ECE R87 STATES 25mm) OF AN INDICATOR LIGHT, THE DRL MUST DIM WHEN THE INDICATOR IS OPERATED. USE THE INDICATOR HARNESS PROVIDED.
- **3.** Using the hardware provided separately (250-5000-UNI), mount the DRLs according to the requirments above. Depending on your car model, the customized installation may be performed:
 - WITH OR WITHOUT THE SUPPLIED BRACKETS AND HARD-WARE
 - WITH OR WITHOUT CUTTING OR MODIFYING THE VEHICLE SURFACES.


NOTE: You may use the M6 tapped holes on the light module's body for any other type of mounting.

STEP 2: ELECTRICAL INSTALLATION (SEE FIGURE 5)

- 1. Connect the Short DRL Extension Harness to the Black/White connector of the Control Module and the Driver's side DRL.
- **2.** Connect the Long DRL Extension Harness to the Grey/White connector of the Control Module and the Passenger's side DRL.

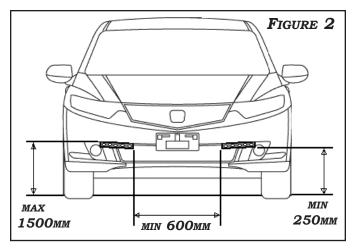

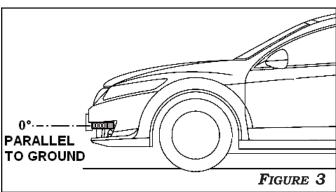

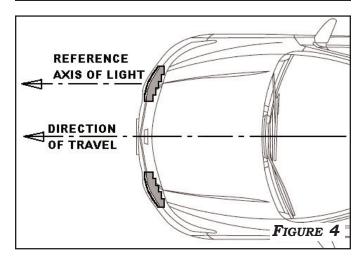

INSTALLATION

STEP 2: ELECTRICAL INSTALLATION

(CONTINUED)

NOTE: It is recommended to solder all electrical connections and cover with heat shrink tubing, see *Figure 6*. If soldering and heat shrink tubing is not an option, use the provided electrical connectors.

- **3.** SECURE THE CONTROL MODULE IN THE DRIVER'S SIDE OF THE ENGINE BAY USING THE PROVIDED DOUBLE-SIDED TAPE AND/OR HARDWARE. BE SURE TO THOROUGHLY CLEAN THE AREA WITH ISOPROPYL ALCOHOL OR OTHER ACCEPTABLE CLEANER.
- **4.** Connect the Power harness to the Control Module.
- **5.** Connect Red wire from Power Harness to Fuse harness supplied.
- **6.** Connect the Fuse harness to +12V Ignition source such as the cigarette lighter.
- **7.** Connect Blue wire from Power Harness to +12V of Headlight or Headlight Switch.
- **8.** Connect Black wire to vehicle Ground or Negative (-) battery terminal.

NOTE: IF THE DRLs are located within 100mm (ECE R87 states 25mm) of an indicator light, the DRL must dim when the indicator is operated. Use the Indicator harness provided and connect as follows:

- CONNECT THE RED WIRE OF THE INDICATOR HARNESS TO +12V DRIVER SIDE INDICATOR LIGHT (TURN SIGNAL).
- Connect the Blue wire of the Indicator Harness to +12V Passenger Side Indicator Light (Turn signal).

STEP 3: TEST ALL FUNCTIONS

NOTE: Make sure the DRLs are connected to the Control Module prior to reconnecting the Battery.

- 1. RECONNECT THE BATTERY.
- 2. Ensure DRLs remain on while the ACC power is on.
- 3. Ensure DRLs dim when headlights are turned on.
- **4.** If using the Indicator Harness, ensure DRL dims when respective indicator light is turned on.

STEP 4: REASSEMBLY

- 1. Reassemble the vehicle.
- ${f 2.}$ Secure all wires with ${f Z}$ IP ties away from the engine and any sharp/moving objects.

