


Part Number: 250-8137

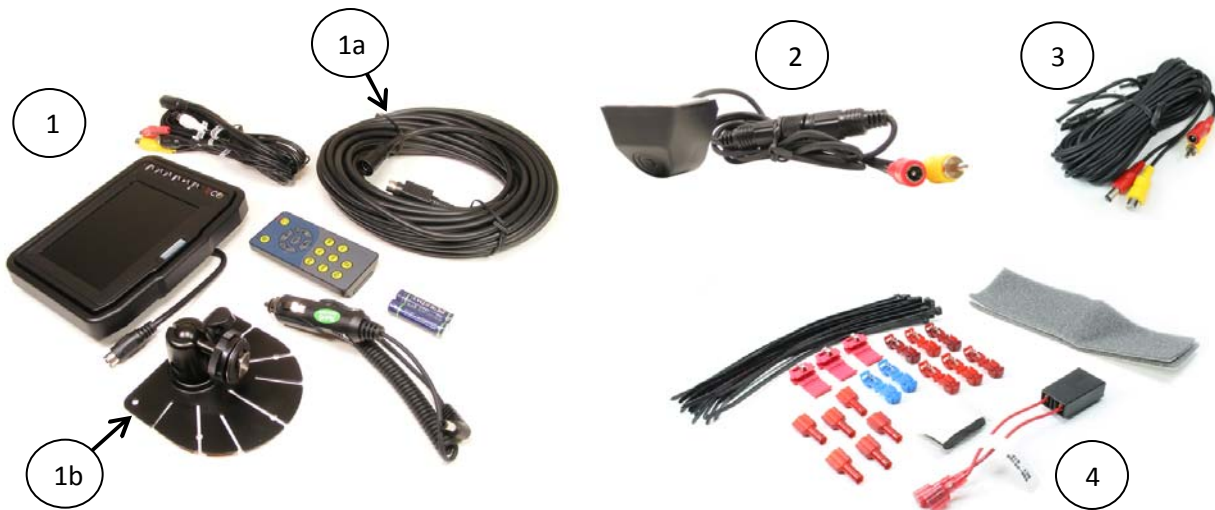

Kit Contents


Item #	Qty.	Description	Service #
1	1	Mirror Monitor Kit	250-8202
1a	1	Main Cable	N/A
1b	1	2" Stand	250-8132
2	1	Camera Kit	250-8112
3	1	Harness	250-8503
4	1	Sack Part	250-8509



Part Number: 250-8137



Remove A-Pillar cover from drives side A-Pillar.

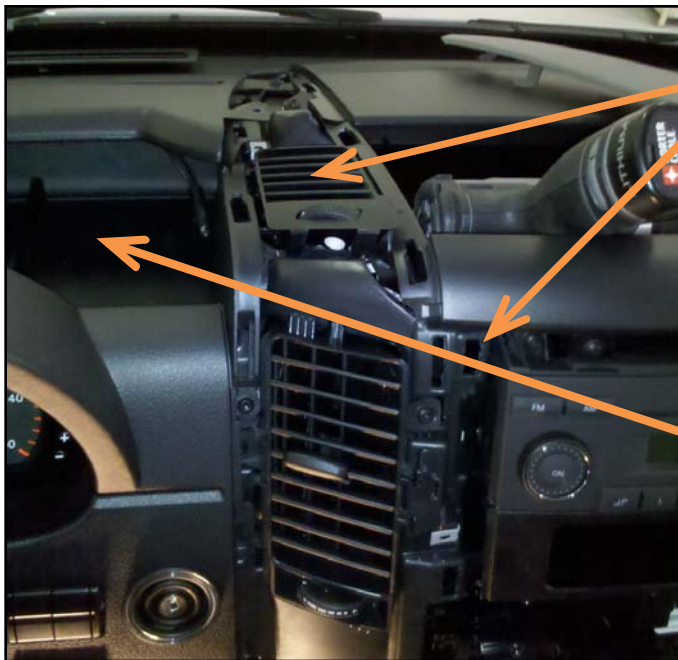


Remove radio surround trim piece dash & dash board piece.

Feed Monitor Harness from A-pillar & Dash unction area and leave 2-3 inches for connection to monitor.


Route Back up Cable to A-Pillar

Route RCA Cable ends to the driver's side fuse panel.

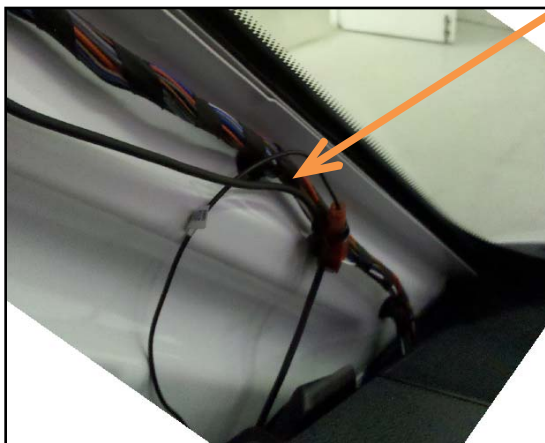

Connect Monitor Backward wire to white w/blue trace in a-pillar bundle.

Connect DC harness leads to Black with Yellow Trace(+) at gray connector of fuse panel and Brown Vehicle Ground Wire.

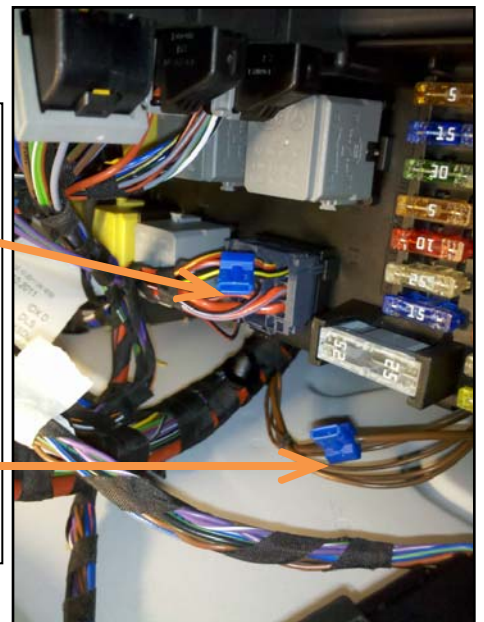

Part Number: 250-8137



Pull weather stripping from top of door casing to make cable routing easier



Route Extension Cable from fuse box up along the A-Pillar to B pillar and on to the driver's side back door. Wire tie the in place inside of B-Pillar taking care not to obstruct the seat belt..



Part Number: 250-8137

Remove covers over body harness and route Camera harness along OE harness routing using wire ties to secure harness in place.



Remove access covers to expose the inside of the Back door support in order to route wire to back door and also to gain access to the accordion grommet retainer clips.

Part Number: 250-8137

Remove accordion Grommet ends from van and door routing harness towards the rear door..



Remove the 2 plastic nuts on inside that hold driver-side brake light fixture in place. You may want to use masking tape to hold fixture during removal and replacement of fixture.



Remove retainers from the door panel to expose the inside of the door.



Remove M-6 nuts from trim piece for camera harness routing into vehicle.



Part Number: 250-8137



Clean mounting area with alcohol. Remove adhesive backing and mount camera in area shown. (The closer to the center of the vehicle the better) Make sure camera is straight before final press. Once camera position is verified, press and hold camera in place for 10 seconds to insure proper adhesion.

IMPORTANT – if using this kit with 250-8883 (Park Assist System) do not mount camera until you are ready to calibrate the exact position as shown in the PAS installation instructions.

Part Number: 250-8137

Notes:

