



07 Chevrolet Uplander Cruise Instructions 250-9004

REMOVE FOLLOWING PARTS:

1. Remove knee panel and steering wheel shroud.

INSTALLING CRUISE CONTROL:

1. Locate 40 pin pass through connector left of steering column clipped to metal support bracket. Connect “**White**” wire from cruise harness to position 8 of 40 pin connector “**Gray**” wire for cruise input.
2. Connect “**Red and Green**” wires from cruise harness to position 7 of 40 pin connector “**Pink**” wire for ignition power.
3. Locate diagnostic connector below knee panel. Connect the “**Black**” wire in the cruise harness to “**Black**” wire for ground. **Figure 2**

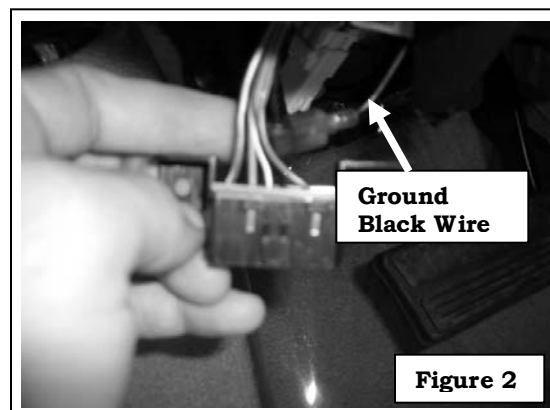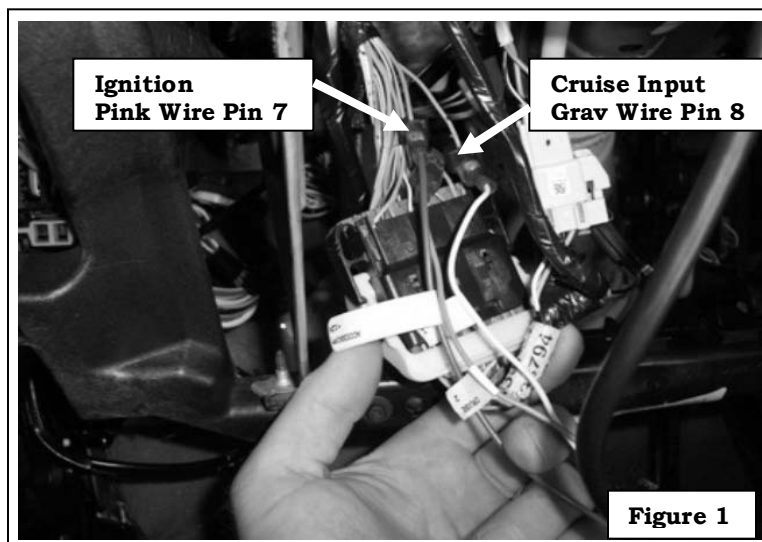

07 Chevrolet Uplander Cruise Instructions 250-9004

INSTALLING CONTROL SWITCH:

