
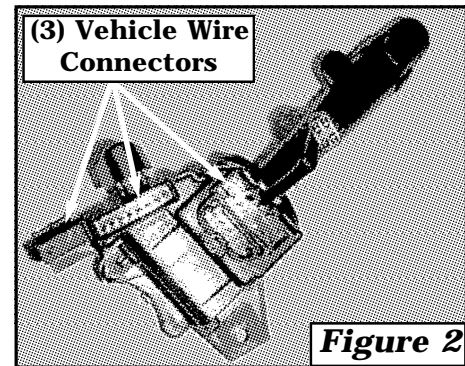


2002-2004 Chevrolet Trailblazer/Silverado GMC Envoy/Sierra

Cruise Control Switch Installation Instructions Part No. 250-1729-TB


Installation

1. Disconnect Parking release cable.
2. Remove lower knee panel (4) 7mm screws.
3. Remove metal knee guard (4) 10mm bolts.
4. Remove column shroud (2) T25 screws.
5. Remove (2) T25 screws on existing switch (1) at top and (1) at bottom. **Figure 1**
6. Remove (3) male harness connectors from switch. **Figure 2**
7. Replace cruise switch in reverse order including attaching 4-pin male connector to 4-pin female connector to accommodate cruise function.

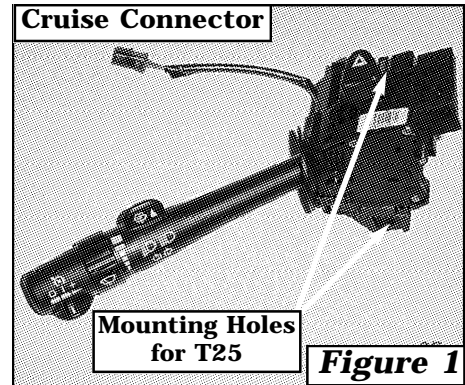

Some 2004 GMC trucks come without the intermediate harness from the cruise lever to the vehicle. You will need to create the harness using the information below. Route the wires from the 4-pin connector on the switch to the 52-pin connector under the driver's-side dash. Solder the wires to the back side of the 52-pin connector as listed below:

Silverado			
Factory Lever	52-Pin Connector		Function
A Pink	A2 Pink		Ignition
B Gray	B32 Gray/White or Gray		On
C Blue	B1 Gray/Black		Accel-Resume
D Black	B10 Dark Blue		Set/Coast

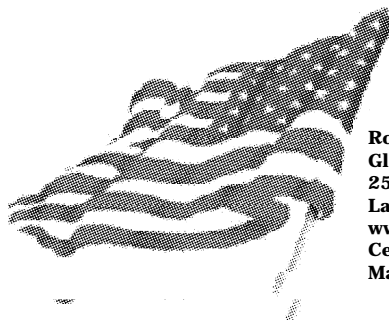

Rostra Precision Controls, Inc.
Global Automotive Accessories Group
2519 Dana Drive
Laurinburg, NC 28352-4000
www.rostra.com
Certified QS 9000/ISO 9001
Made in the U.S.A.