




**ROSTRA REARSIGHT  
250-8081-LPB  
INSTALLATION INSTRUCTIONS**



# INSTALLATION


## MIRROR MONITOR

1. REMOVE THE EXISTING MIRROR FROM WINDSHIELD USING APPROPRIATE METHOD AND REPLACE WITH REARSIGHT MIRROR. **SOME VEHICLES MAY REQUIRE A REMOVAL TOOL.**
2. TIGHTEN BASE WITH A PHILLIPS SCREW DRIVER.
3. CONNECT THE EXTENSION HARNESS TO THE MIRROR MONITOR HARNESS. CONNECT THE **RED WIRE** TO FUSED IGNITION +12VOLT POWER CIRCUIT. CONNECT THE **BLACK WIRE** TO VEHICLE GROUND POINT. CONNECT THE **GREEN WIRE** TO REVERSE POWER CIRCUIT AT BACK UP LIGHT. **FIGURE 1**
4. WHEN ROUTING WIRES USE CAUTION IN AREAS WHERE HARNESS CAN BE PINCHED OR BOUND

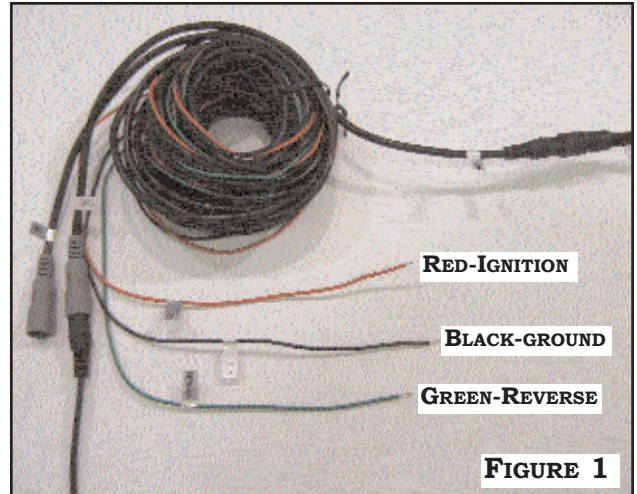

## CAMERA

1. MOUNT CAMERA AT THE REAR OF VEHICLE USING LICENSE PLATE MOUNT HOLES. MAKE SURE THE LOCATION IS ACCESSIBLE FROM THE INSIDE OF THE VEHICLE TO PROVIDE ACCESS TO THE EXTENSION HARNESS.
2. CONNECT THE EXTENSION HARNESS TO THE CAMERA AS SHOWN IN **FIGURE 2**. USING THE HARDWARE PROVIDED, ADJUST MOUNT OF THE CAMERA SO THAT THE AREA VIEWED INCLUDES A MINOR PORTION OF THE BUMPER. **FIGURE 3**. THIS WILL PROVIDE DEPTH PERCEPTION FOR VIEWING AS THE VEHICLE IS DRIVEN IN REVERSE.

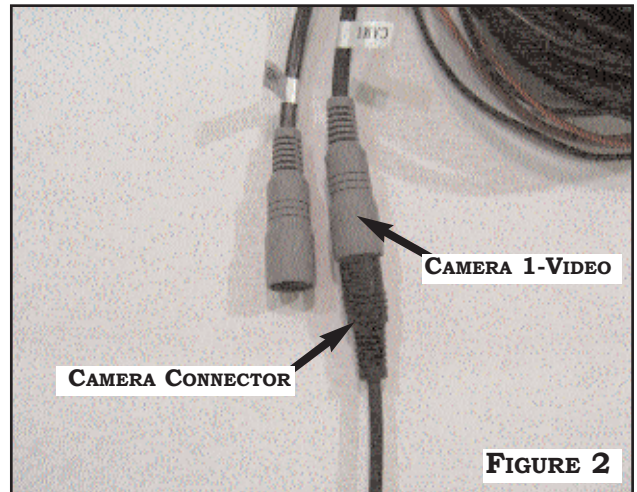

## TROUBLESHOOTING

### 1. MIRROR MONITOR NOT WORKING

WITH IGNITION ON, NO POWER LIGHT ON MIRROR MONITOR:

1. VERIFY IGNITION +12 VOLTS TO MONITOR ON RED IGNITION WIRE.
2. VERIFY GROUND TO MONITOR ON BLACK WIRE WITH MULTI-METER READING TO BE LESS THAN 1OHM.
3. VERIFY MONITOR HARNESS IS FULLY PLUGGED INTO MONITOR.

### 2. No VIDEO

WITH IGNITION ON, THE MIRROR MONITOR POWER LIGHT COMES ON BUT NO PICTURE:

1. VERIFY EXTENSION HARNESS IS IN CAMERA 1.
2. VERIFY HARNESSES ARE MATED PROPERLY AT CAMERA.
3. VERIFY POWER ON THE RED AND BLACK WIRES AT THE CAMERA.

### 3. No REVERSE OVERRIDE

1. CHECK REVERSE WIRE CONNECTION.
2. VERIFY CAMERA IS CONNECTED TO CAMERA 1 OF EXTENSION HARNESS.

