







# PARTS IDENTIFICATION

ITEM	QUANTITY	PART NUMBER	DESCRIPTION
1	1	250-8305 250-8306	3.5" MONITOR ASSEMBLY, GRAY 3.5" MONITOR ASSEMBLY, TAN
2	1		SACK PARTS: TIE STRAPS, FOAM TAPE

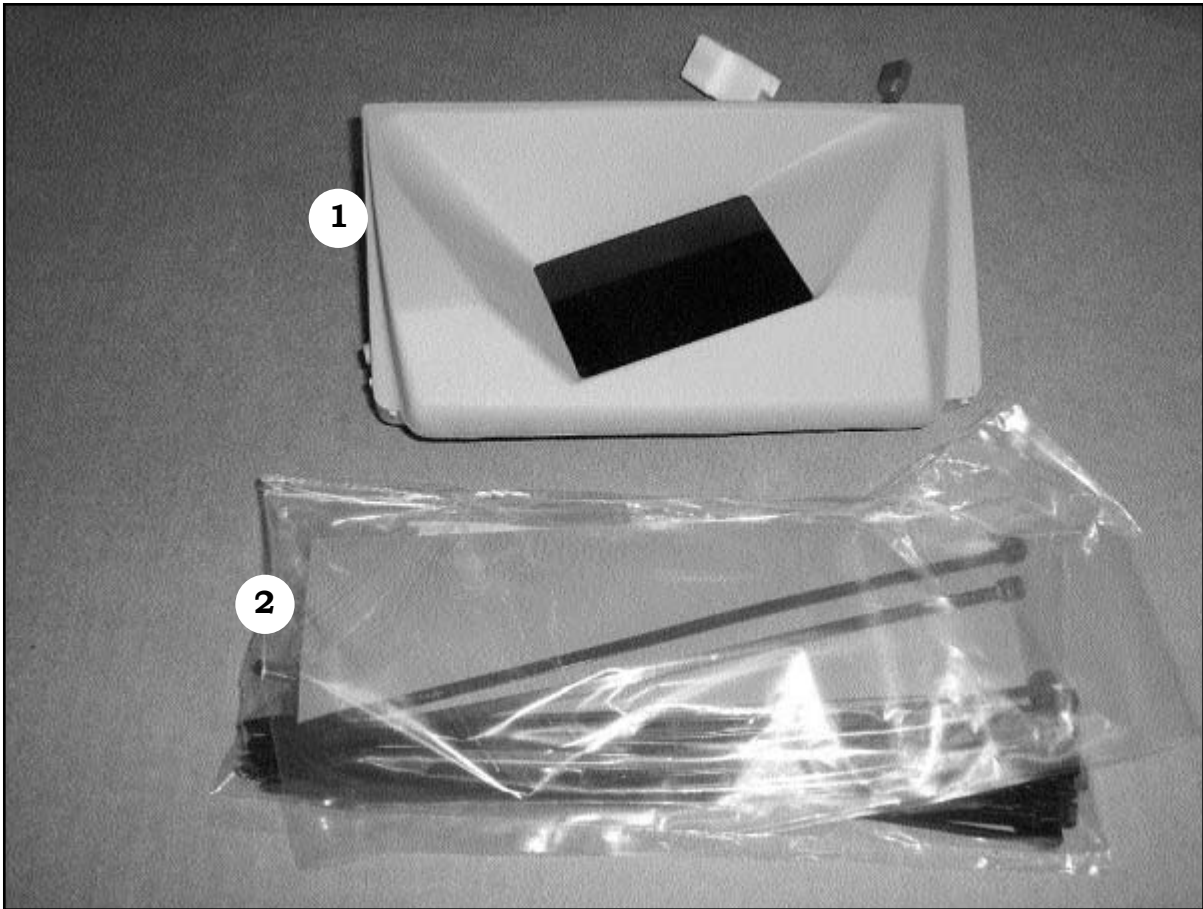

**\*BEFORE** BEGINNING INSTALLATION, **FAMILIARIZE** YOURSELF WITH THE INSTALLATION INSTRUCTIONS AND THE **REARSIGHT™** BACK-UP CAMERA SYSTEM COMPONENTS.


# INSTALLATION

**STOP**  
  
  
  
**CAUTION: It is advisable to disconnect the negative battery cable for 3 minutes before beginning installation, to avoid unintended air bag deployment. Note and record any anti-theft radio codes prior to disconnecting.**





## VEHICLE PREPARATION



1. REMOVE THE OVERHEAD CONSOLE BY REMOVING SIX (6) TORX-20 SCREWS BEHIND THE SUNGLASSES, BUSINESS CARD HOLDERS, AND DOME LIGHT AREA. **FIGURE 1.** *NOTE: THE CONSOLE FOR A TRUCK WITH A SUNROOF AND OTHER TRIM LEVELS AND CAB CONFIGURATIONS USE **FIGURE 2.** DISCONNECT DOME LIGHT HARNESS FROM FRONT OF OVERHEAD CONSOLE.*
2. RELEASE PIVOT POINTS IN SUNGLASS COMPARTMENT AND REMOVE FROM OVERHEAD CONSOLE. **FIGURE 3.** REMOVE SUNGLASS COMPARTMENT DEPLOYMENT DAMPENER BY DEPRESSING BOTH TABS AND PUSHING DAMPENER THROUGH SIDE OF CONSOLE. **FIGURE 4**
3. FOR **07 TUNDRA**, DRILL A 7/8" OR 22MM HOLE IN RIGHT CORNER AS SHOWN IN **FIGURE 5.** CAREFULLY DE-BURR THE HOLE. FOR **08 SEQUOIA**, CUT TABS AND REMOVE KNOCKOUT. **FIGURE 6**
4. DISLodge THE WHITE 12-PIN VEHICLE CONNECTOR FROM THE HOLDING CLIPS SHOWN IN **FIGURE 7.**

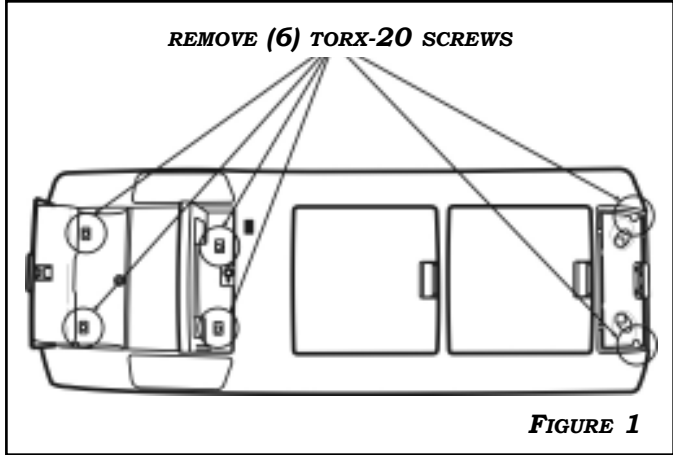

**FIGURE 1**

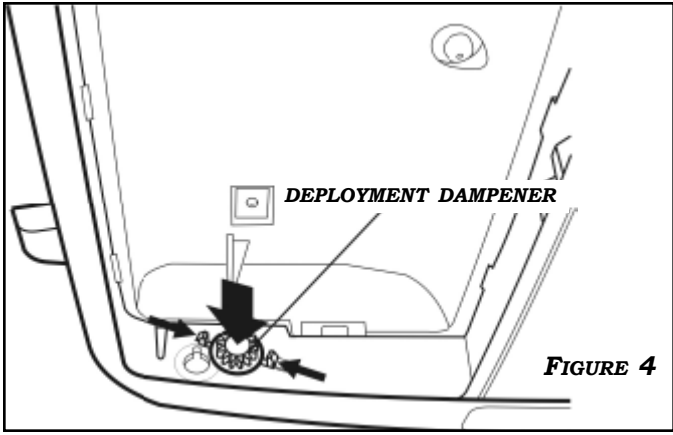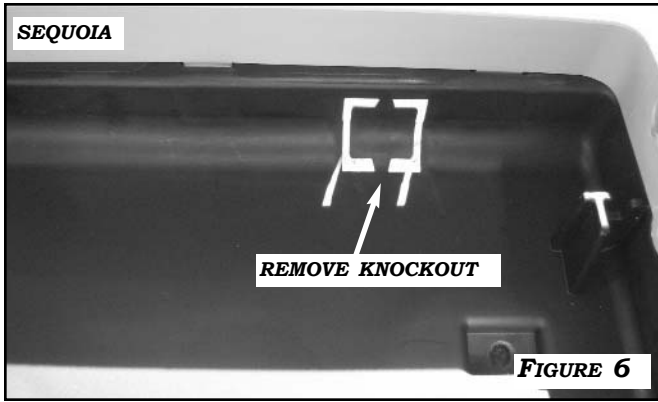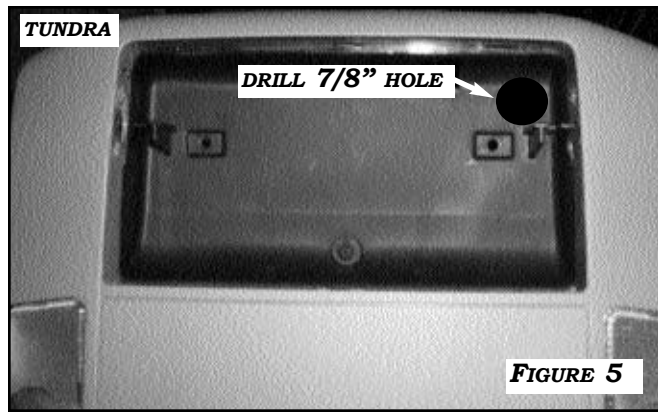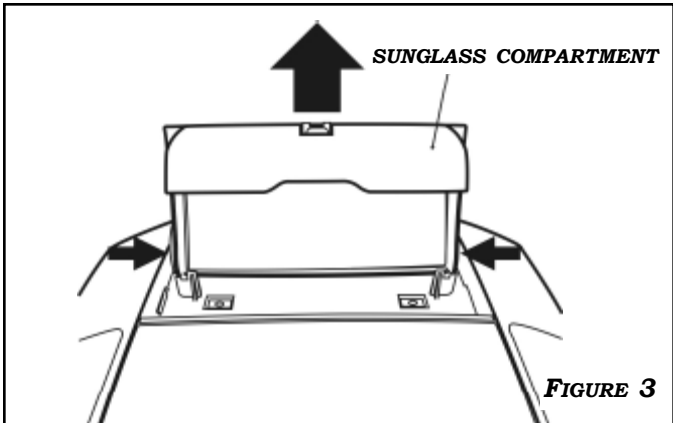

# INSTALLATION

## ROUTING HARNESS AND POWER CONNECTIONS



1. CONNECT DOME LIGHT HARNESS PREVIOUSLY DISCONNECTED. ROUTE THE VEHICLE 12-PIN CONNECTOR THROUGH DRILLED HOLE IN CONSOLE. CONNECT MONITOR HARNESS TO FACTORY HARNESS. WRAP THE CONNECTORS WITH THE SUPPLIED FOAM TAPE. **FIGURES 8,9.** BE SURE TO TAPE THE UNUSED WHITE AND BLACK WIRES FROM MONITOR HARNESS WITH ELECTRICAL TAPE. **FIGURE 10**

## INSTALLING REARSIGHT MONITOR



1. TO INSTALL MONITOR ASSEMBLY INTO OVERHEAD CONSOLE: START WITH REAR EDGE "HOOK" TABS ON MONITOR HOUSING INTO OVERHEAD CONSOLE. **FIGURE 11.** THEN PRESS SIDE TABS INWARD AND PUSH FRONT OF MONITOR ASSEMBLY UNTIL IT LOCKS INTO POSITION. **FIGURES 12,13**

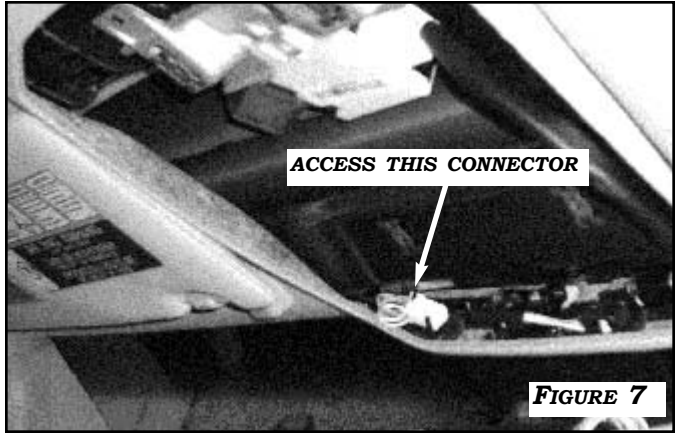


FIGURE 7

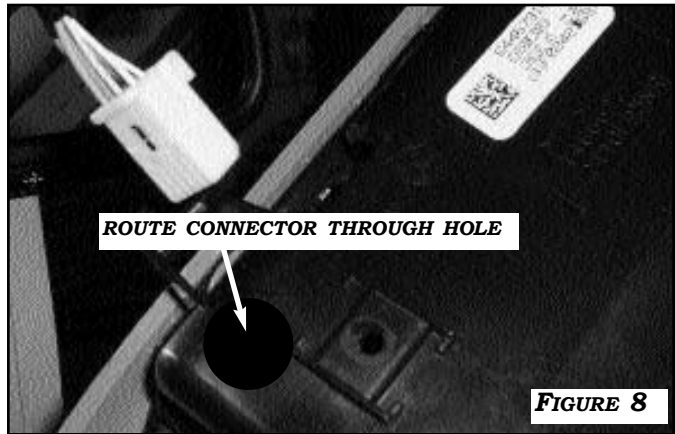


FIGURE 8

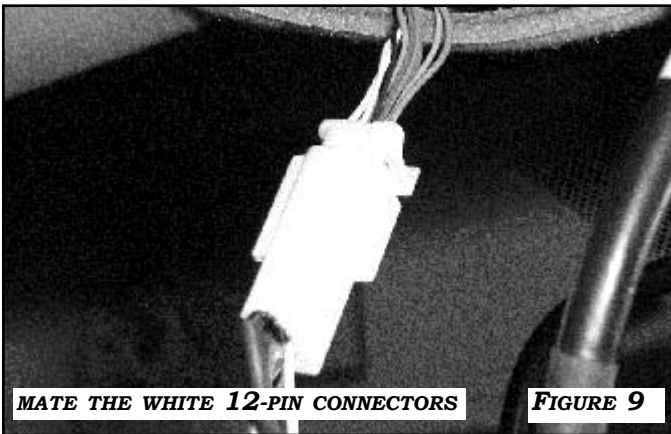


FIGURE 9



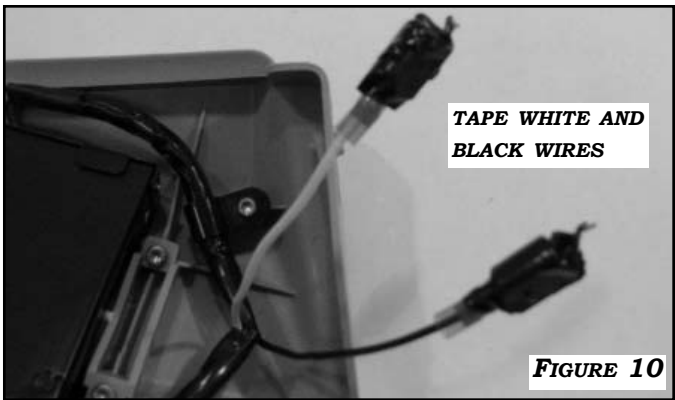


FIGURE 10

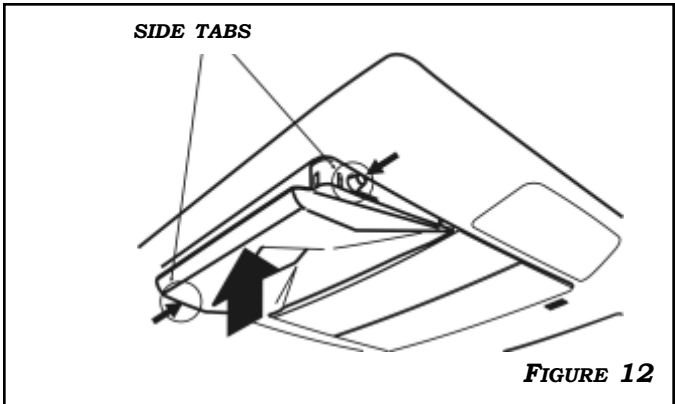

# TESTING AND REASSEMBLY

## TESTING

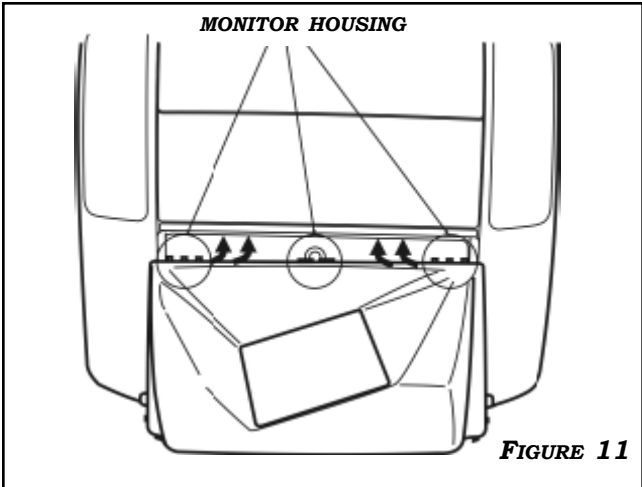

1. RECONNECT NEGATIVE BATTERY CABLE AND TORQUE TO **3 FT\*lbs.** RE-ENTER ANY THEFT DETERRENT INFORMATION, IF APPLICABLE.



2. TURN THE IGNITION SWITCH **ON**. PUT THE VEHICLE IN REVERSE. VERIFY THAT THE REARSIGHT MONITOR IS ON AND THAT THE CAMERA'S PICTURE APPEARS.

3. IF THERE IS NO PICTURE, VERIFY ALL CONNECTIONS ARE SECURE.

## REASSEMBLY



1. REINSTALL ALL TRIM PIECES TAKING SPECIAL CARE TO ENSURE HARNESSES AND WIRING CONNECTIONS ARE PROPERLY SECURED.

2. BE SURE HARNESS IS NOT PINCHED OR BOUND BY TRIM PIECES.

3. PLACE THE OWNER'S CARD IN THE GLOVE BOX.

4. RECONNECT ALL DISCONNECTED BULBS AND CHECK FOR FUNCTION.



**FIGURE 13**

# NOTES

# NOTES

