

**Rostra RearSight
250-8804-BULCAM
Installation Instructions**



CONTENTS

PARTS IDENTIFICATION.....	2
HELPFUL HINTS.....	2
INSTALLATION.....	3
TESTING.....	4

PARTS IDENTIFICATION

ITEM	QUANTITY	PART NUMBER	DESCRIPTION
1	1	250-8804	3.5 REARSIGHT MONITOR/MIRROR/SLIM
2	1	250-8545	3.5 MONITOR INTERFACE HARNESS/STANDARD
	1	250-8566	3.5 MONITOR INTERFACE HARNESS/SLIM
3	1	250-8503	CAMERA EXTENSION HARNESS
4	1	250-8083	REAR CAMERA ASSEMBLY
5	1	250-8568	SACK PARTS: TIE STRAPS, T-TAPS, SEALING PUTTY



HELPFUL HINTS

1. **BEFORE STARTING INSTALLATION:**
FAMILIARIZE YOURSELF WITH THE INSTALLATION INSTRUCTIONS AND REARSIGHT COMPONENTS.
2. **ANTI-THEFT RADIO:**
IF VEHICLE IS EQUIPPED WITH AN ANTI-THEFT RADIO, THE RADIO CODE MUST BE WRITTEN DOWN PRIOR TO DISCONNECTING BATTERY CABLE. THE CODE MUST BE REENTERED WHEN THE NEGATIVE BATTERY CABLE IS REINSTALLED.
3. **REMOVAL OF NEGATIVE BATTERY CABLE:**
DISCONNECT THE **NEGATIVE BATTERY CABLE** FOR **THREE MINUTES** BEFORE INSTALLING THE REARSIGHT COMPONENTS TO AVOID UNINTENDED AIRBAG DEPLOYMENT.

FIGURE 1


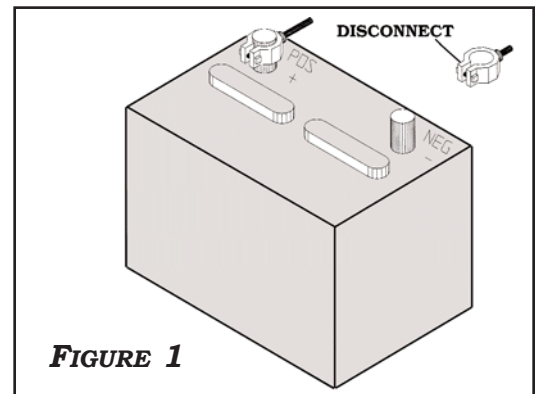



FIGURE 1

MONITOR WIRING DIAGRAM

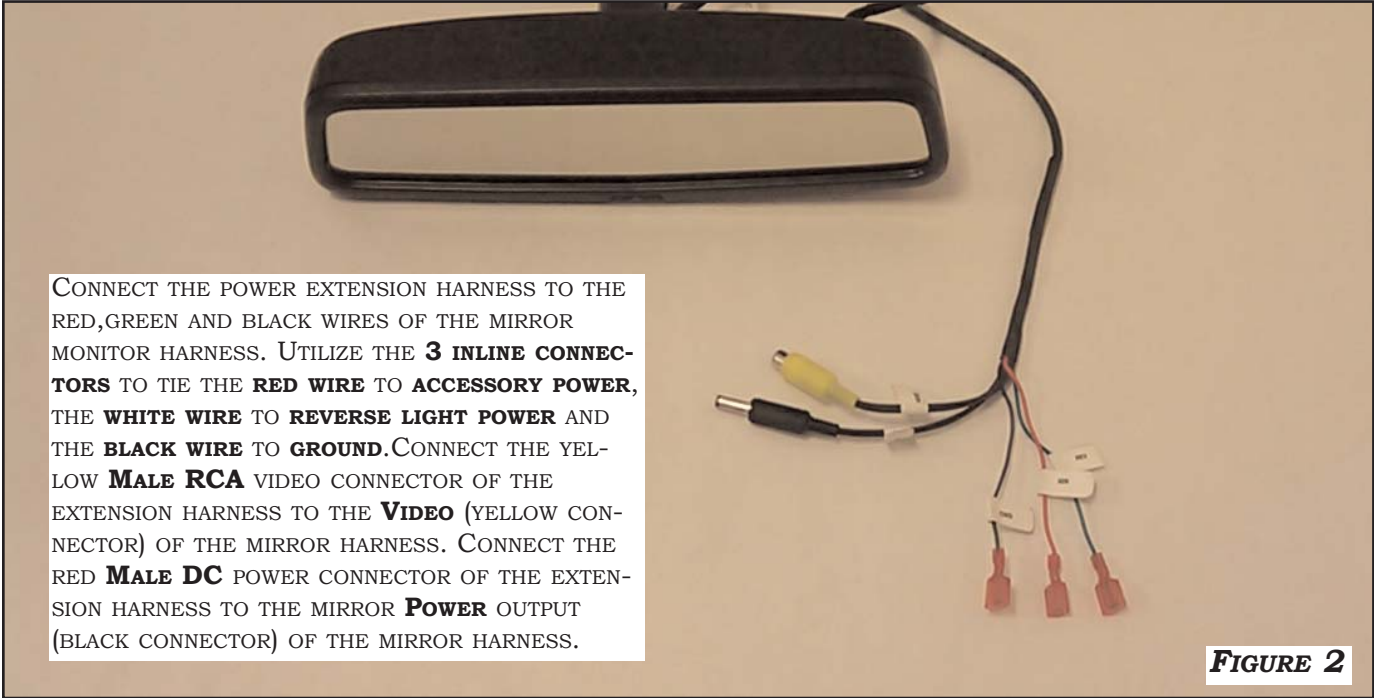

CAMERA INSTALLATION

1. DRILL IN CAMERA WITH 22 MM DRILL.
2. USE THE **30FT CAMERA EXTENSION HARNESS** TO CONNECT THE MIRROR MONITOR TO THE CAMERA. ROUTE THE EXTENSION HARNESS WITH EXISTING WIRING ALONG THE VEHICLE.

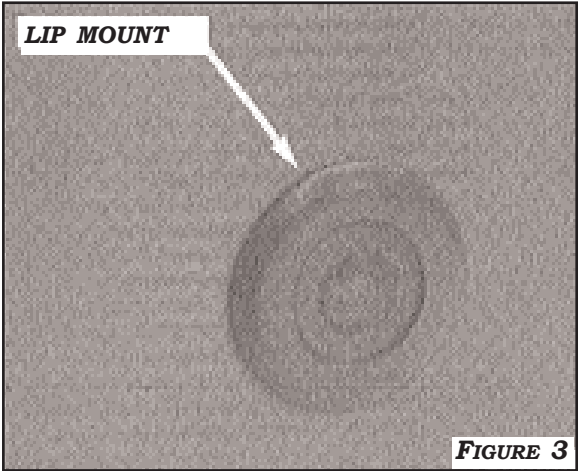

TESTING AND REASSEMBLY

TESTING

1. RECONNECT NEGATIVE BATTERY CABLE AND TORQUE TO **3 FT LBS**. RE-ENTER ANY THEFT DETERRENT INFORMATION, IF APPLICABLE.
2. TURN THE IGNITION SWITCH **ON**. PUT THE VEHICLE IN REVERSE. VERIFY THAT THE REARSIGHT MIRROR IS ON AND THAT THE CAMERA'S PICTURE APPEARS.
3. IF THERE IS NO PICTURE, VERIFY ALL CONNECTIONS ARE SECURE.

REASSEMBLY

1. REINSTALL ALL TRIM PIECES TAKING SPECIAL CARE TO ENSURE HARNESSES AND WIRING CONNECTIONS ARE PROPERLY SECURED.
2. BE SURE HARNESS IS NOT PINCHED OR BOUND BY TRIM PIECES.
3. PLACE THE OWNER'S CARD IN THE GLOVE BOX.
4. RECONNECT ALL DISCONNECTED BULBS AND CHECK FOR FUNCTION.