SUPPLEMENTAL INSTALLATION GUIDE

DAYTIME RUNNING LIGHT (DRL) KIT 2000-2011 TOYOTA TACOMA

PART NUMBER: 260-1002-TAC1




GENERAL APPLICABILITY

ΤΟΥΟΤΑ ΤΑCOMA

KIT CONTENTS

ITEM	Qτγ	DESCRIPTION
1	2	LED DAYTIME RUNNING LIGHTS
2	1	CONTROL MODULE
3	1	DRL EXTENSION HARNESSES
4	1	MOUNTING BRACKETS
5	1	Hardware Package

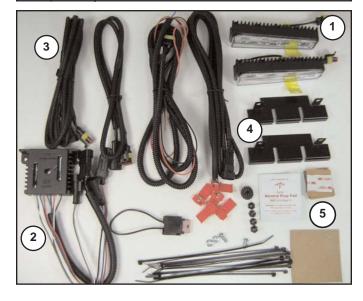

RECOMMENDED TOOLS

PERSONAL & VEHICLE PROTECTION			
SAFETY GLASSES			
Masking Tape			
SPECIAL TOOLS			
Volt-Ohm Meter			
RECOMMENDED INSTALLATION TOOLS			
TRIM REMOVAL TOOL	Phillips Screwdriver		
TAPE MEASURE	10-MM WRENCH		
DRILL BITS	Soldering Tool		
Wire Cutters	Sharp Knife		
SPECIAL CHEMICALS			

CONFLICTS

NOTE:

LEGEND

STOP

STOP: DAMAGE TO VEHICLE MAY OCCUR. DO NOT PROCEED UNTIL PROCESS COMPLIANCE HAS BEEN MET.

OPERATOR SAFETY: Use Caution to Avoid Risk of Injury.

CRITICAL PROCESS: PROCEED WITH CAUTION TO ENSURE A QUALITY INSTALLATION. THESE POINTS WILL BE AUDITED ON A COMPLETED VEHICLE INSTALLATION.

GENERAL PROCESS: THIS HIGHLIGHTS SPECIFIC PROCESSES TO ENSURE A QUALITY INSTALLATION. THESE POINTS WILL BE AUDITED DURING THE ACCESSORY INSTALLATION.



TOOLS & EQUIPMENT: THIS CALLS OUT THE SPECIFIC TOOLS AND EQUIPMENT REQUIRED FOR THE PROCESS.

REVISION MARK: This MARK HIGHLIGHTS A CHANGE IN INSTALLATION WITH RESPECT TO PREVIOUS ISSUE.

INSTALLATION

MOUNTING INSTRUCTIONS


1. Using supplied brackets and hardware, mount DRLs in location shown.



BRACKET MOUNTING



1. Clean mounting area with alcohol. Place bracket into selected position. Press and hold bracket down firmly for 5 seconds before releasing.

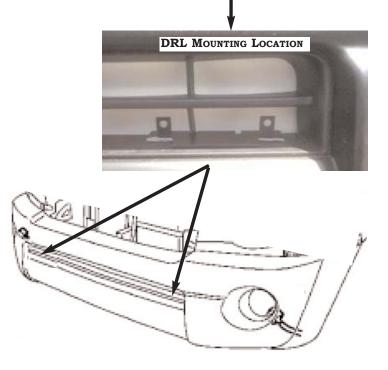

DRL MOUNTING

1. YOU MUST use 2 washers per bolt when mounting DRL to bracket.

2. DRL LIGHT ANGLE CAN BE ADJUSTED BY PLAC-ING WASHER(S) IN FRONT OF OR BEHIND BRACKET MOUNT TABS.

