Part Number: 250-8060 (2.4" Monitor)
250-8061 (3.5" Monitor)

Kit Contents

Item	Qty	Description
1	1	Rearview Mirror / lcd monitor
2	1	Tacoma Vehicle Interface Harness
3	1	Hardware Bag
4	1	Owners Card
5		
6		

Hardware Bag Contents

Item	Qty	Description
1	4	Wire Ties
2	2	Adhesive Foam
3		
4		
5		
6		
7		
8		
9		
10		

Additional Items Required for Install

Item	Qty	Description
1	n/a	Electrical Tape
2		
3		
4		

Conflicts

Note:

Recommended Tools

Safety Tools	
Special Tools	
Installation Tools	
Fastener Removal Tool	Wire Cutters
Trim Removal Tool	Pliers
T-20 Torx Driver	
Special Chemicals	

Color Applicability/Trim Level

Vehicle Trim Color \ Accessory Color														

General Applicability

All Models

Recommended Sequence Of Application

* Mandatory

Legend

STOP: Damage to vehicle may occur. Do Not Proceed until process compliance has been met.

OPERATOR SAFETY: Use Caution to Avoid Risk of Injury.

CRITICAL PROCESS: Proceed with Caution to Ensure a Quality Installation. These points will be audited on a completed vehicle installation.

GENERAL PROCESS: This highlights specific processes to ensure a quality installation. these points will be audited during the accessory installation.

TOOLS & EQUIPMENT: This calls out the specific tools and equipment required for the process.

REVISION MARK: This mark highlights a change in installation with respect to previous issue.

Special Note: Installation Sequences

After **Safety** mandated preparatory steps have been taken, the installation sequence is the suggested method for completing the accessory installation. In some instances the suggested sequence is written for one associate to install and in others the sequence is given as part of a team accessory installation. Unless otherwise stated in the document, the associates may perform the installation steps in any order to make the installation as efficient as possible while maintaining consistent quality.

PARTS IDENTIFICATION

Item	Quantity	Part Number	Description
1	1	N/A	Mirror/Monitor Assembly
2	1	N/A	Tacoma Interface Harness
3	1	N/A	Sack Parts: Tie Straps, Foam Tape

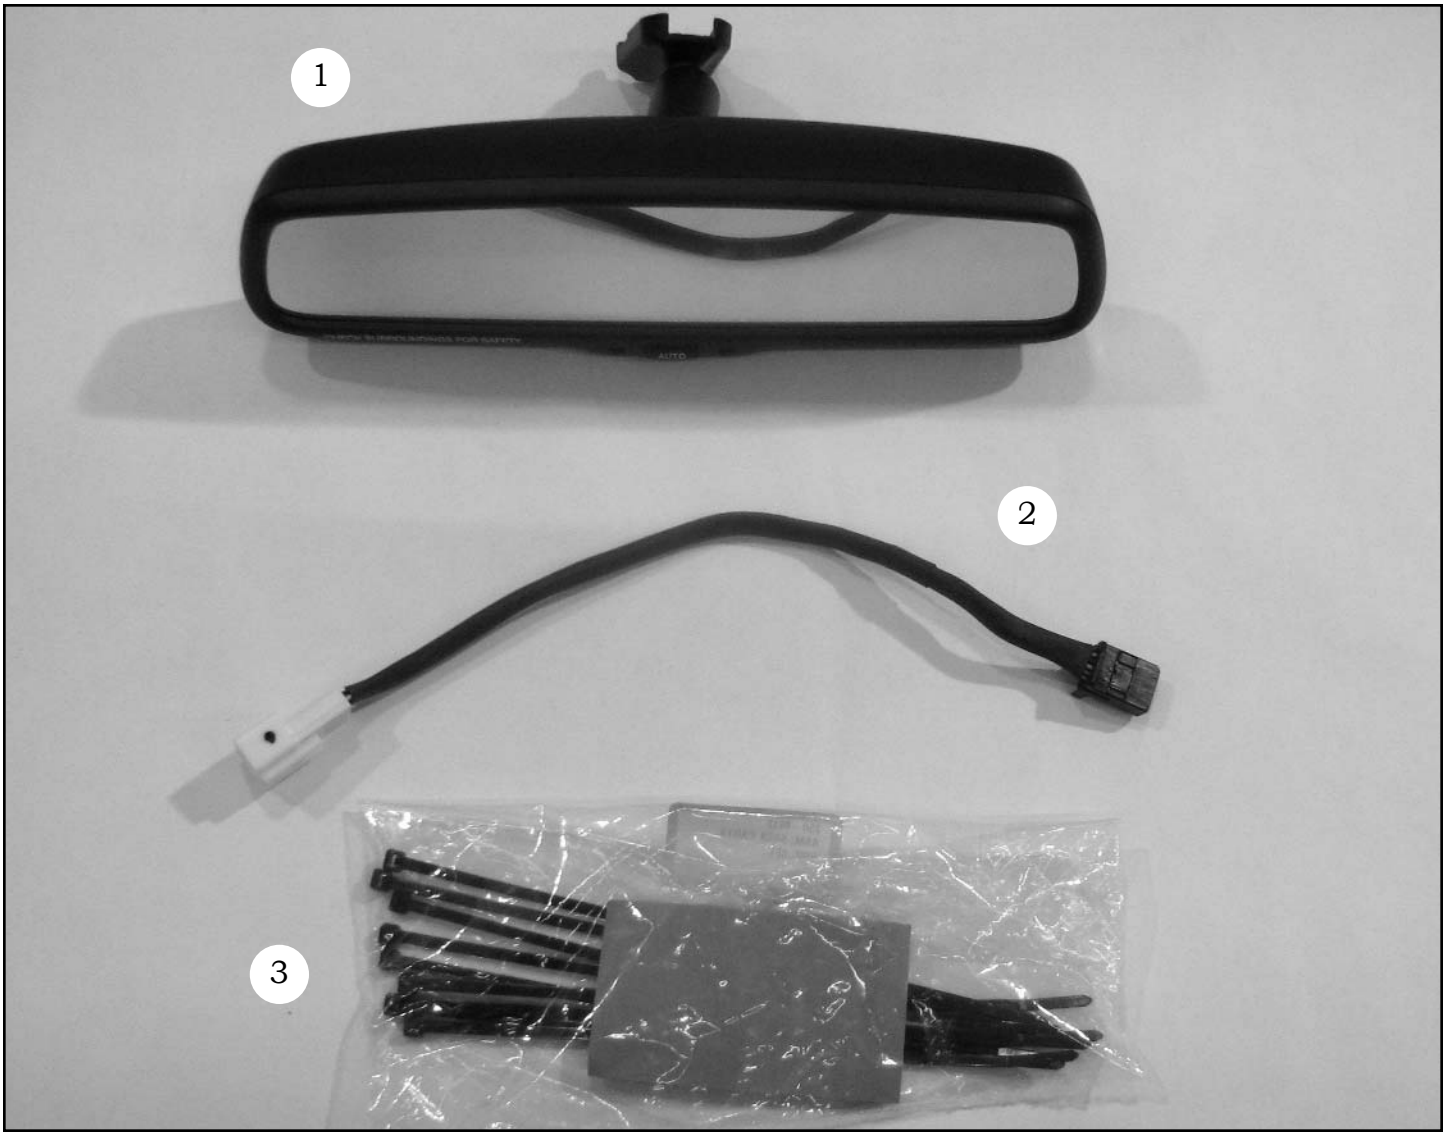

***Before** beginning installation, **familiarize** yourself with the installation instructions and the **RearSight™** back-up camera system components.

INSTALLATION

***CAUTION:** It is advisable to disconnect the negative battery cable for 3 minutes before beginning installation, to avoid unintended air bag deployment. Note and record any anti-theft radio codes prior to disconnecting.*

Vehicle Preparation

1. Remove the factory rear view mirror by loosening the Torx-20 screw and sliding it off of the windshield mount. **Figure 1**

2. Remove the overhead console by removing one (1) phillips screw behind the sunglasses holder. *Note: Other trim levels and cab configurations may have a longer overhead console.* **Figure 2**

3. Dislodge the white 14-pin vehicle connector from the holding clips shown in **Figure 3.**

Routing Harness and Power Connections

1. Connect the Tacoma interface harness to the vehicle by snapping the two 14-pin connectors together. Make sure the lock is engaged. **Figure 4**

2. Connect the Tacoma Interface harness to the mirror monitor by inserting the 12-pin or 16-pin connector into the mating connector on the back side of the mirror monitor. Make sure the lock is engaged. **Figure 5**

Installing RearSight Mirror

1. Install the RearSight mirror to the windshield. Secure it by tightening the Torx-20 screw. **Figure 6**

2. Use the supplied foam tape to wrap the the mirror harness. Bundle the excess cable and secure it behind the headliner with wire ties.

Figure 1

Figure 2

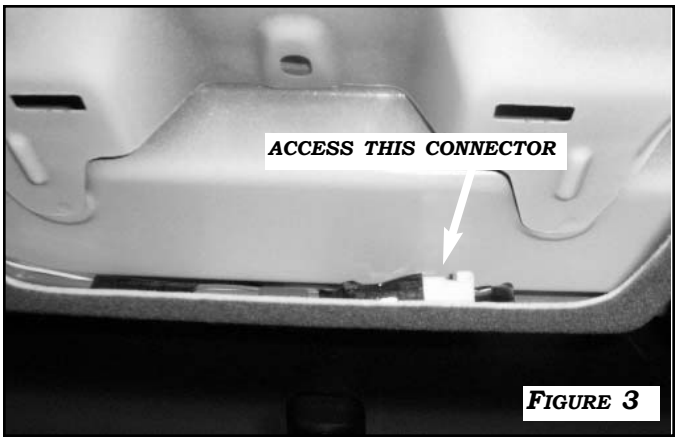

Figure 3

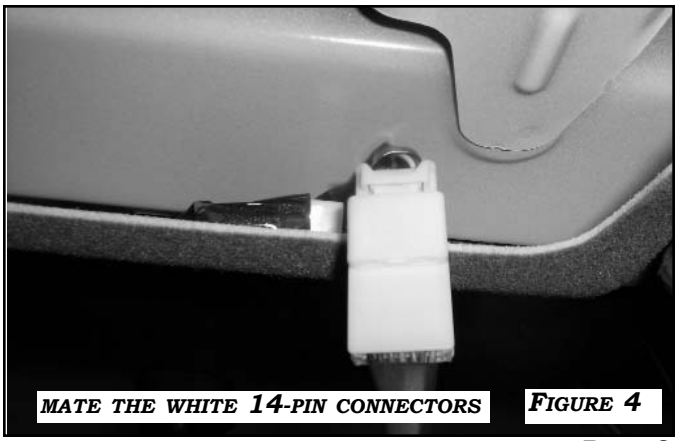

Figure 4

TESTING AND REASSEMBLY

TESTING

1. Reconnect Negative Battery Cable and torque to **3 ft*lbs**. Re-enter any theft deterrent information, if applicable.

2. Turn the ignition switch **on**. Put the vehicle in reverse. Verify that the **RearSight™** Monitor is on and that the camera's picture appears.

3. If there is no picture, verify all connections are secure.

REASSEMBLY

1. Reinstall all trim pieces taking special care to ensure harnesses and wiring connections are properly secured.

2. Be sure harness is not pinched or bound by trim pieces.

3. Place the Owner's card in the glove box.

4. Reconnect all disconnected bulbs and check for function.

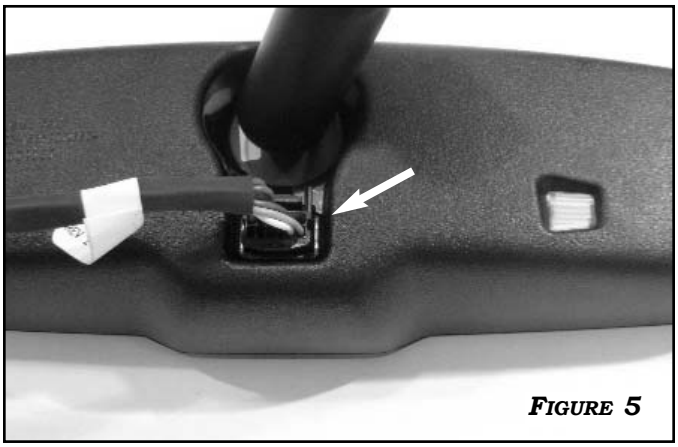

Figure 5

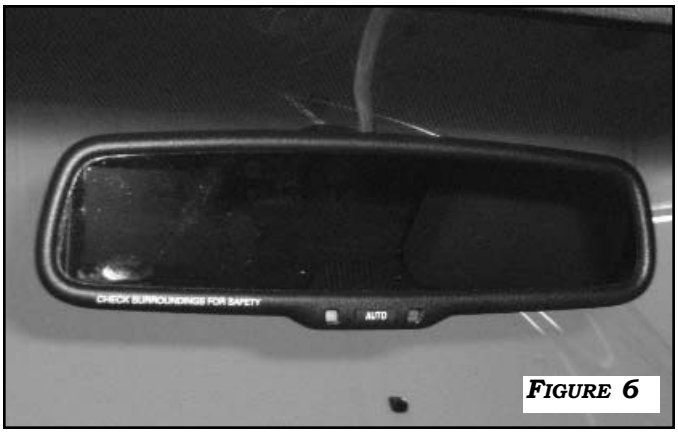

Figure 6

Figure 7

NOTES