


PART NUMBER: 250-9661-NS

GENERAL APPLICABILITY

THIS CRUISE WAS TESTED AND VERIFIED ON:
 FORD TRANSIT 2.0 - 2.5 LITER ONLY

KIT CONTENTS/SERVICE PARTS

ITEM	QTY	DESCRIPTION	PART#
1	1	CRUISE CONTROL MODULE	250-2888
2	1	PEDAL INTERFACE HARNESS	250-2804
3	1	BRAKE SWITCH HARNESS	250-2759
4	1	CONTROL SWITCH	250-2867
5	1	DIAGNOSTICS HARNESS	250-2783

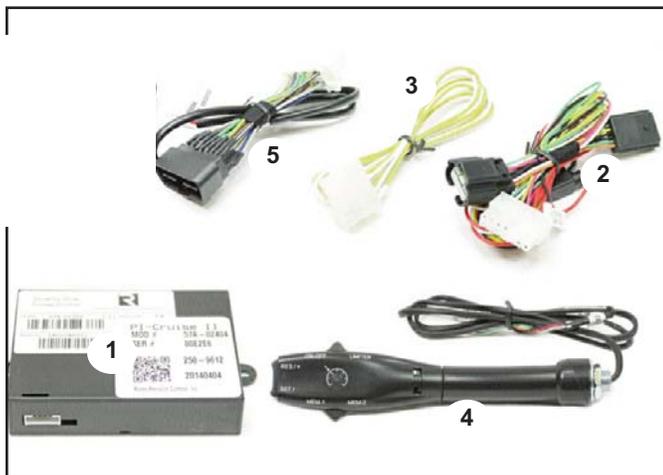

HARDWARE BAG CONTENTS

ITEM	QTY	DESCRIPTION
1	8	WIRE ZIP TIES
2		
3		

RECOMMENDED TOOLS

PERSONAL & VEHICLE PROTECTION	
SAFETY GLASSES	
SPECIAL TOOLS	
VOLT-OHM METER	
INSTALLATION TOOLS	
TRIM REMOVAL TOOL	PHILLIPS SCREWDRIVER
10MM WRENCH	
DRILL BITS	9.5MM OR 3/8" (FOR SWITCH)
14MM WRENCH	
SOLDERING TOOL	
SPECIAL CHEMICALS	

CONFLICTS

NOTE:

LEGEND

- STOP:** DAMAGE TO VEHICLE MAY OCCUR. DO NOT PROCEED UNTIL PROCESS COMPLIANCE HAS BEEN MET.
- OPERATOR SAFETY:** USE CAUTION TO AVOID RISK OF INJURY.
- CRITICAL PROCESS:** PROCEED WITH CAUTION TO ENSURE A QUALITY INSTALLATION. THESE POINTS WILL BE AUDITED ON A COMPLETED VEHICLE INSTALLATION.
- GENERAL PROCESS:** THIS HIGHLIGHTS SPECIFIC PROCESSES TO ENSURE A QUALITY INSTALLATION. THESE POINTS WILL BE AUDITED DURING THE ACCESSORY INSTALLATION.
- TOOLS & EQUIPMENT:** THIS CALLS OUT THE SPECIFIC TOOLS AND EQUIPMENT REQUIRED FOR THE PROCESS.
- REVISION MARK:** THIS MARK HIGHLIGHTS A CHANGE IN INSTALLATION WITH RESPECT TO PREVIOUS ISSUE.



WARNING: DO NOT USE HAND-HELD 2-WAY TRANSCEIVERS INSIDE YOUR VEHICLE WHILE DRIVING.

WHEN TRANSMITTING FROM INSIDE THE CAR, 2-WAY RADIOS THAT OPERATE IN THE 25MHZ-700MHZ FREQUENCY RANGE WITH MORE THAN 2.0 WATTS OF POWER CAN PRODUCE ELECTROMAGNETIC INTERFERENCE THAT COULD INTERFERE WITH THE OPERATION OF CRUISE AND THROTTLE CONTROLS RESULTING IN VEHICLE "LIMP MODE".

USE OF CELLULAR PHONES WILL NOT INTERFERE WITH THESE CONTROLS.



DUE TO SENSITIVE NATURE OF SIGNALS USED FOR THIS PRODUCT, ALL NON-PLUG AND PLAY CONNECTIONS MUST BE SOLDERED. FAILURE TO COMPLY WITH THIS REQUIREMENT WILL VOID WARRANTY.



BEFORE INSTALLATION

TO MAKE THE INSTALLATION EASIER THE COMPLETE INSTALLATION INSTRUCTIONS SHOULD BE READ THROUGH BEFORE INSTALLATION IS STARTED.

THIS INSTALLATION INSTRUCTIONS CONTAINS INFORMATION HOW TO INSTALL THE ELECTRONIC CRUISE CONTROL WHICH IS NOT A Do-It-Yourself JOB.

MODERN CARS ARE EQUIPPED WITH ELECTRONICS WHICH CAN BE COSTLY DAMAGED BY INAPPROPRIATE TREATMENT.

ROSTRA PRECISION CONTROLS CAN NOT BE HELD RESPONSIBLE FOR ANY ERROR CAUSED BY IMPROPER INSTALLATION.



STOP - READ BEFORE INSTALLATION IMPORTANT ADVISORY NOTES THAT YOU MUST FOLLOW

ALWAYS DISCONNECT THE NEGATIVE CABLE FROM BATTERY BEFORE INSTALLATION.

ALWAYS USE THE ENCLOSED INSTALLATION INSTRUCTIONS FOR INSTALLING THE ELECTRONIC CRUISE CONTROL.

CHECK THE PART NUMBER OF THE CRUISE MODULE LABEL IS THE SAME COMPARED TO THE PART NUMBER OF THE INSTALLATION INSTRUCTIONS.

BE AWARE OF RADIO CODES THAT MAY HAVE TO BE ENTERED.


FIND A LOCATION TO INSTALL THE CRUISE MODULE AND CONTROL SWITCH.

IF ANY WIRES ARE LEFT THEN CUT OFF AND INSULATE.

ONLY USE A MULTIMETER TO MEASURE VOLTAGE.


ALWAYS DRIVE THE CAR FOR A COMPLETE TEST BEFORE RE-ASSEMBLING THE CAR.


ALL WIRE LEADS MUST BE SOLDERED.

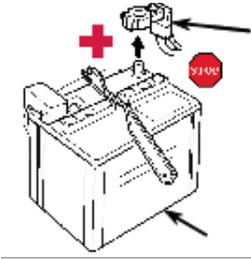



UNPLUG ACCELERATOR PEDAL CONNECTOR
RUN BYPASS HARNESS IN SERIES AS SHOWN IN
PICTURE BELOW.

Connect to the
accelerator pedal

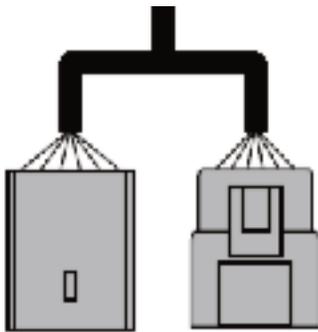


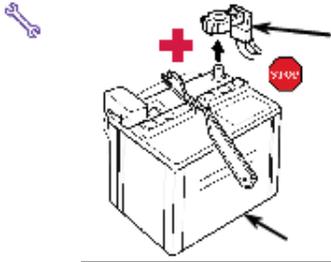


Cut the Rostra connector off and solder wires: Red wire to Pin 6, Black wire to Pin 14

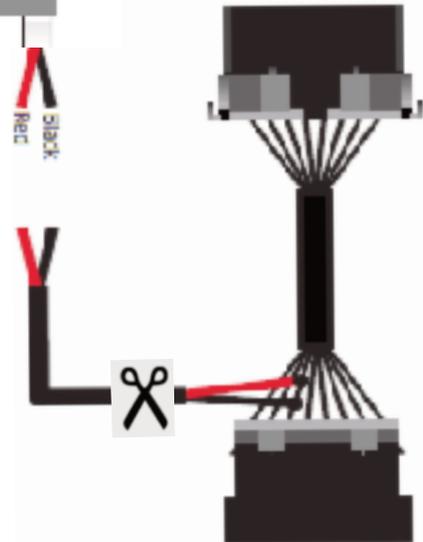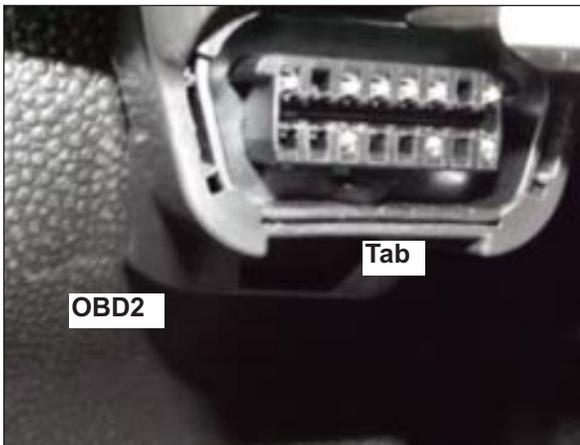

To OBD2 Connector

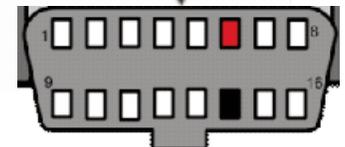


Note: Use a precision tool to press up on the backside of the OBD2 connector housing to release the tab. Push out OBD2 connector toward the back to remove.

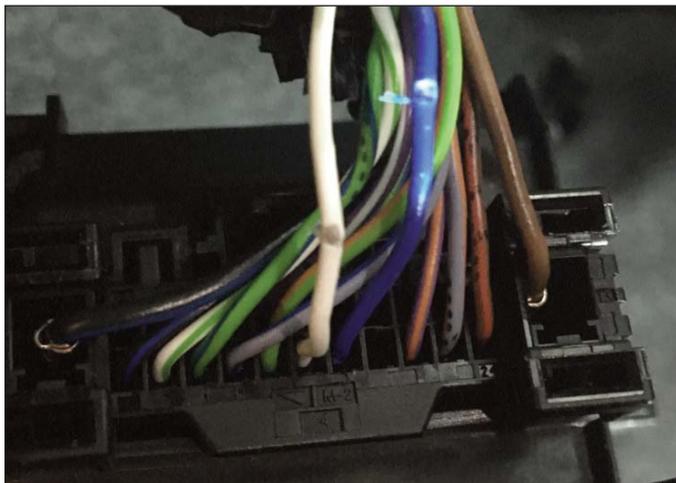


Note: Vehicles Equip. with gateway connector on back of OBD2 solder cruise Red CAN high wire to Blue wire in position 20. Solder Black CAN low wire to White position 19.

Note: Standard OBD2 Connect Red wire to White/Blue wire in Pin 6 and Connect Black

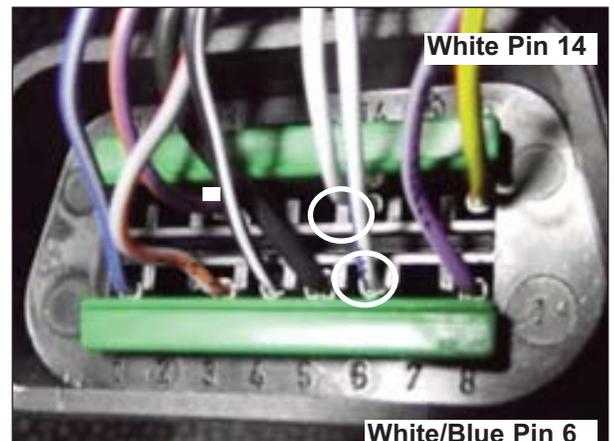

INSTALLATION

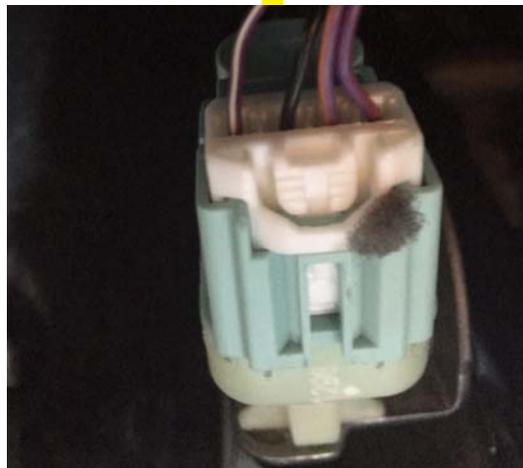

Locate the Brake Switch at top of brake switch assembly. Connect cruise Yellow wire to Violet/White in position 1.



To Ignition

Note: Test the ignition wire on the vehicle before connecting Red wire from cruise system. Check for 12 volts with ignition key on and 0 volts with ignition key off


Connect Red ignition wire to Brown/Yellow or White/Orange wire at the ignition switch connector located at left side of steering column.

Brown/Yellow or White/Orange




INSTALLATION

1. Find a suitable position for the switch on the left hand side of the covering around the steering column.
 2. Mark the position and drill a 3/8 hole.
 3. Use the enclosed fittings so the switch is angled to match the OE turn signal switch lever.
 4. The switch head can be rotated as desired, and locked with the supplied retainer clip.
 5. Insert the wires in the dconnectors to plug into cruise module shown below.
- NOTE: All Views From Wire Side Of Connector

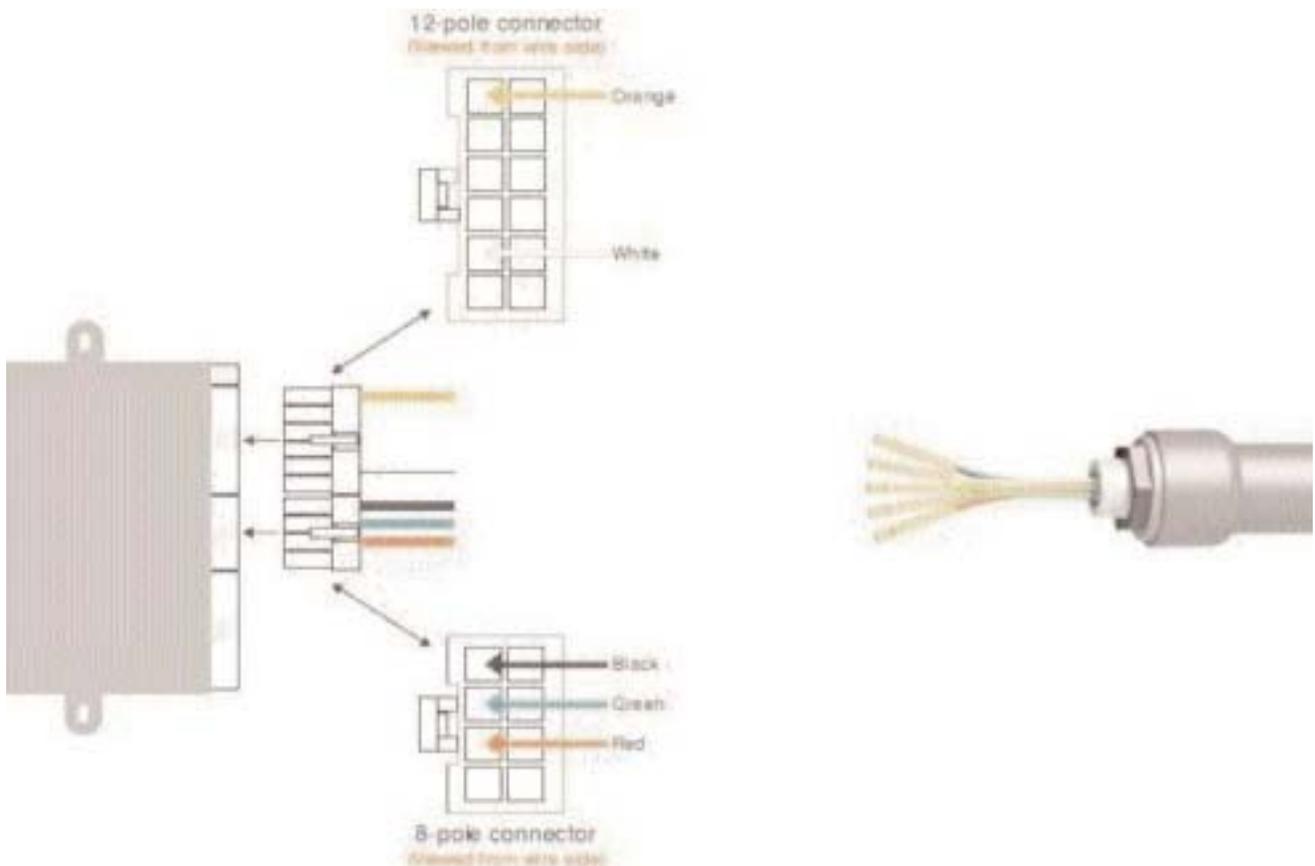

TROUBLESHOOTING

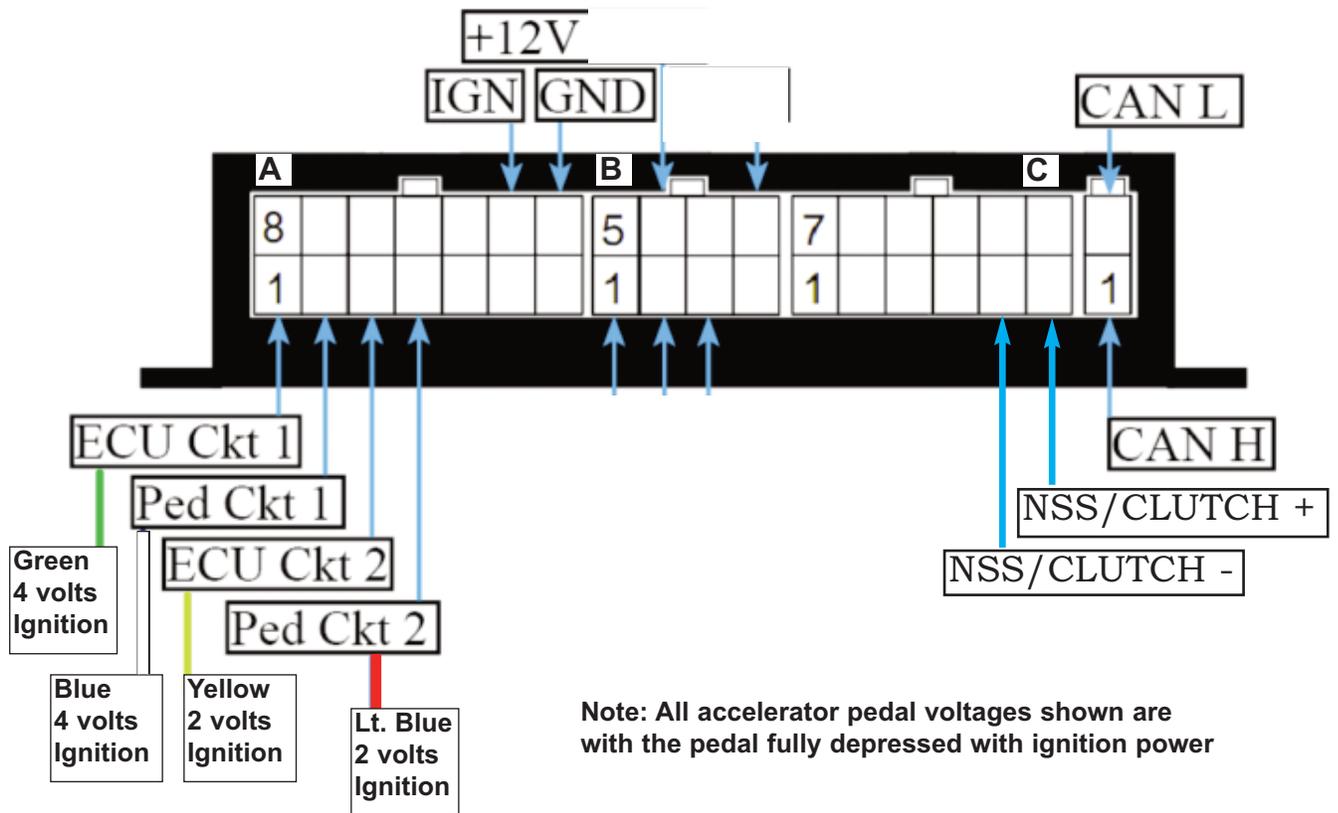

PIN	COLOR	DESIRED RESULTS	FAULT CONDITION
13A	RED	+12V WHEN SWITCHED ON AND +0V WHEN SWITCHED OFF. IGNITION MUST BE GREATER THAN +10V WHILE CRANKING VEHICLE.	NO POWER, VOLTAGE DROP, OR INTERMITTENT CONNECTION WILL CAUSE LOSS OF PEDAL OR "LIMP MODE" CONDITION.
14A	BLACK	LOWEST RESISTANCE TO GROUND AND CLOSEST TO ZERO (0) OHMS AS POSSIBLE. USE A VEHICLE GROUND POINT WHERE OTHER GROUND WIRES ARE CONNECTED.	A BAD GROUND CONNECTION WILL CAUSE THE FOLLOWING CONDITIONS: CRUISE WILL NOT FUNCTION, LOSS OF PEDAL OR "LIMP MODE" CONDITION.

